

Getting to the Bottom of Negative Capacitance FETs



Wei Cao and Kaustav Banerjee

Department of Electrical and Computer Engineering, University of California, Santa Barbara, CA 93106

Contact E-mails: {weicao, kaustav}@ece.ucsb.edu

Abstract—In this paper, we take a fresh look at the physics and operation of Negative Capacitance (NC)-FETs, and provide unambiguous feedback to the device designers by examining NC-FETs’ design space for sub-60 mV/dec Subthreshold Swing (*SS*). Straightforward design rule is derived, for the first time, based on the capacitor network in NC-FETs. Contrary to many ongoing efforts, it is found that: 1) state-of-the-art MOSFET platforms, such as SOI, FinFET, 2D-FET etc., are not suitable for constructing small-*SS* NC-FETs, unless internal metal gate is introduced; 2) quantum capacitance prevents NC-FETs from achieving hysteresis-free small-*SS*, and low density-of-states (DOS) material can alleviate this issue, to some extent; 3) NC non-linearity can be engineered to reach a tradeoff between sub-60 *SS* and hysteresis; 4) it is more encouraging and practical to use NC to recycle subthreshold voltage loss in short-channel MOSFETs, and overdrive voltage (essentially a type of loss).

I. INTRODUCTION

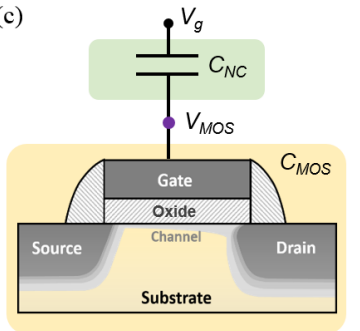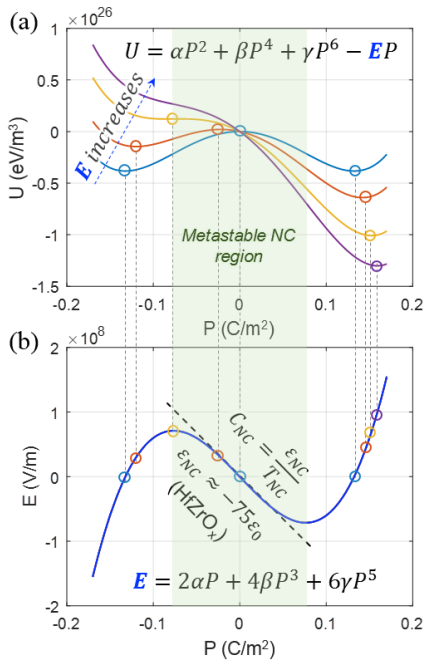

Simply adding a NC layer on top of MOSFET, effective gate voltage can be scaled by a factor of

$$A_v = \frac{\Delta V_{MOS}}{\Delta V_g} = \frac{|C_{NC}|}{|C_{NC}| - C_{MOS}} \geq 1$$

Sounds too easy to be true...

The concept of NC is employed to describe the polarization response of “double-well” material systems (typically ferroelectric materials) (**Fig. 1(a)**) in the metastable state, to external electric field, as shown in **Fig. 1(b)** [1]. NC gated FETs are believed to be able to achieve sub-60 *SS*, with minimal penalty in manufacturability, thanks to its simple structure, as shown in **Fig. 1(c)**. Although there have been extensive studies on this topic, many of them, including the original paper in which the idea of NC-FET was proposed [2], have been focused on the interplay between voltage amplification (see the formula in **Fig. 1(c)**) and hysteresis of metal-NC-oxide-metal capacitors, instead of NC-FETs, which have a distinct subthreshold region. Moreover, due to the lack of a straightforward design rule for NC-FETs, experimentalists in this arena have been indiscriminately trying to add NC on various materials/FET structures, ending up with unnecessary failure and/or uninterpretable results. This work is targeted at establishing an unambiguous design framework for NC-FET experimentalists, as well as exploring the design space of NC-FET for hysteresis-free sub-60 *SS*.

II. ANALYSIS AND DISCUSSION

A. Formulating I_d - V_g Swing (S)

The switching of any FET is realized by electrostatic (or capacitive) modulation of the potential of the channel through which current is conducted. For the convenience of analysis, **Fig. 2(a)** depicts all relevant capacitors in a typical NC-FET. C_Q , C_{trap} , $C_{s/d,geo}$, and C_{dep} are the quantum, trap induced, source/drain geometrical, and depletion capacitances, respectively. These five capacitances can be categorized as gate voltage divider capacitance

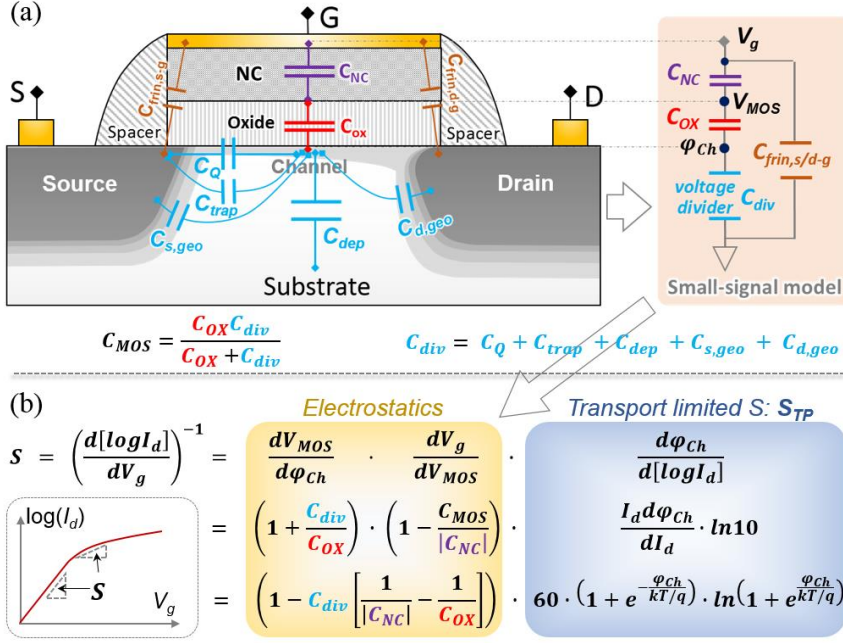


Fig. 2. (a) Capacitors in a NC-FET involved in determining the channel potential; C_Q , C_{dep} , $C_{s,d,geo}$, C_{trap} and C_{div} are the quantum-, depletion-, s/d geometrical, trap induced, and voltage divider capacitors, respectively. (b) Formulating I_d-V_g swing (S) by decoupling the electrostatics and transport contributions. S_{TP} represents the carrier transport mechanism limited S . Note that $C_{frin,s/d-g}$ does not affect S .

C_{div} , which should be minimized in modern MOSFET design for optimal gate efficiency. The source/drain-to-gate fringing capacitance $C_{frin,s/d-g}$ is irrelevant to channel potential control, and hence to I_d-V_g characteristics, as reflected in the small-signal capacitance model in **Fig. 2(a)**. All the other symbols have their nominal connotations. Based on this capacitor network, the swing (S) of I_d-V_g curve is derived and expressed in the form of decoupled contributions of electrostatics and transport (**Fig. 2(b)**). S_{TP} represents the carrier transport mechanism limited S .

B. Visualizing NC Design Space in Subthreshold Regime

In the subthreshold regime, S is reduced to SS . The main difference is the missing mobile charge, and hence C_Q . As indicated in the formula in **Fig. 3(a)**, SS is determined by the competition between the body factor (m) and NC voltage gain (A_v). Only when $|C_{NC}|$ becomes smaller than the gate oxide capacitance C_{ox} , A_v can dominate the competition, and deliver sub-60 SS , as depicted in **Fig. 3(a)**. In principle, continuously reducing $|C_{NC}|$ can keep reducing SS . However, once SS (or S) of a NC-FET is designed below zero, the hysteresis will appear in fabricated device, as illustrated in **Fig. 3(b)**. In fact, negative SS (or S) in theory and hysteresis in experiments stem from identical physics: polarization switching. Therefore, hysteresis-free subthreshold I_d-V_g sets a lower bound on $|C_{NC}|$, which still leaves

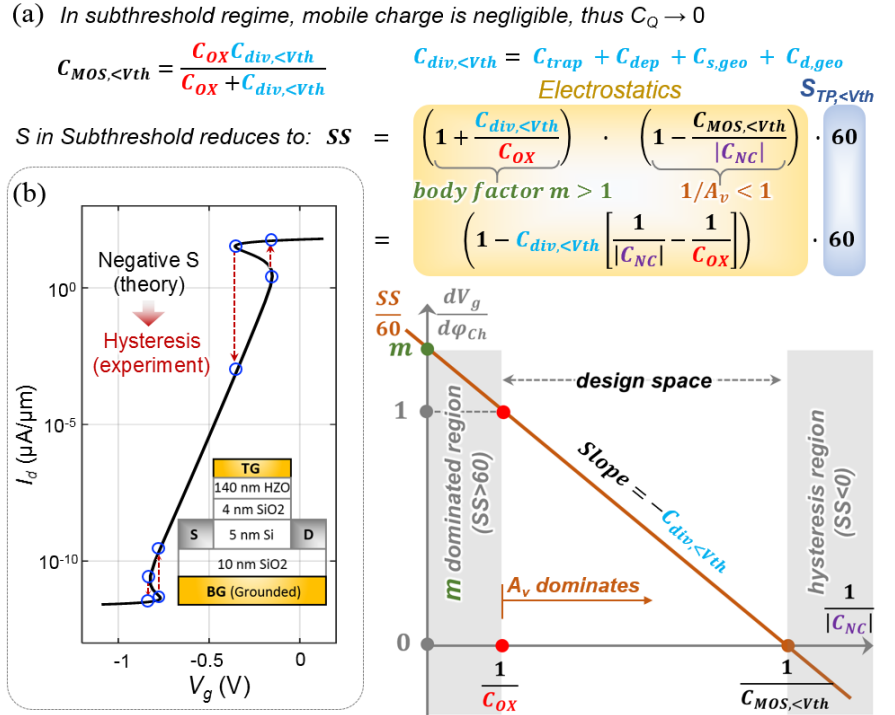


Fig. 3. (a) In subthreshold regime, S_{TP} reduces to 60, NC design space for sub-60 subthreshold S , i.e. SS , and hysteresis-free I_d-V_g is $C_{MOS,<vth} < |C_{NC}| \leq C_{ox}$. The vertical axis $dV_g/d\phi_{ch}$ describes gate efficiency. (b) Illustration of the connection between negative S in theory and hysteresis in experimental measurement of I_d-V_g curve.

a wide NC design space, as long as subthreshold divider capacitance $C_{div,<V_{th}}$ (the slope of the SS/60 line) is not designed to be too large.

C. NC Does Not Help “Good” FETs

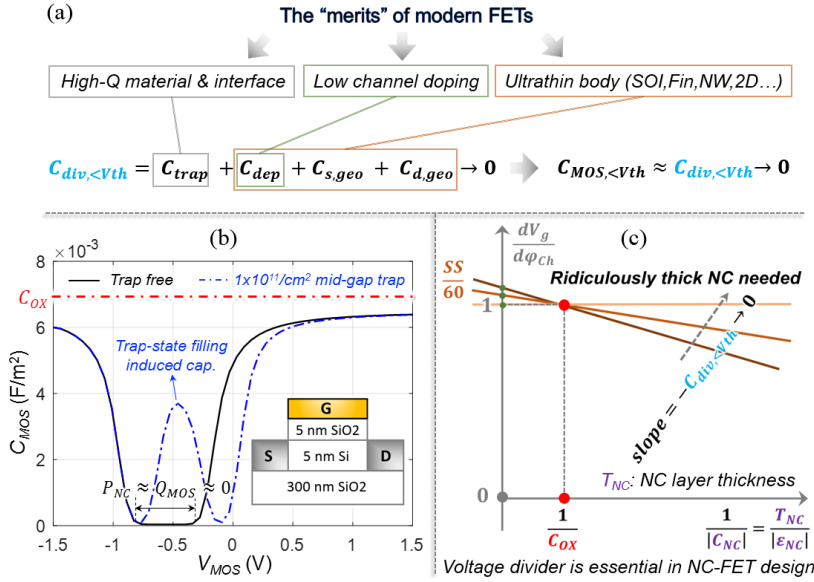


Fig. 4. (a) Modern/“good” FETs have negligible $C_{div,<V_{th}}$, and hence $C_{MOS,<V_{th}}$, i.e., no polarization in NC ($P_{NC} \approx Q_{MOS}$), or equivalently A_v benefit, in subthreshold regime. (b) Simulated C_{MOS} in an ultrathin Si SOI MOSFET w/ and w/o traps, quantitatively verifying the analysis in (a). Note that trap states can introduce non-negligible $C_{div,<V_{th}}$. (c) Illustration of the necessity of voltage divider capacitor.

FETs induces (through electric displacement field $D (=C_{MOS,<V_{th}} \cdot V_g)$, which is continuous across oxide/NC interface) negligible polarization in NC, and thus miniscule voltage amplification A_v . Therefore, contrary to MOSFET design, a voltage divider (i.e., finite $C_{div,<V_{th}}$) should be intentionally introduced into NC-FETs to exploit A_v benefits.

D. Quantum Capacitance “Kills” Sub-60 SS

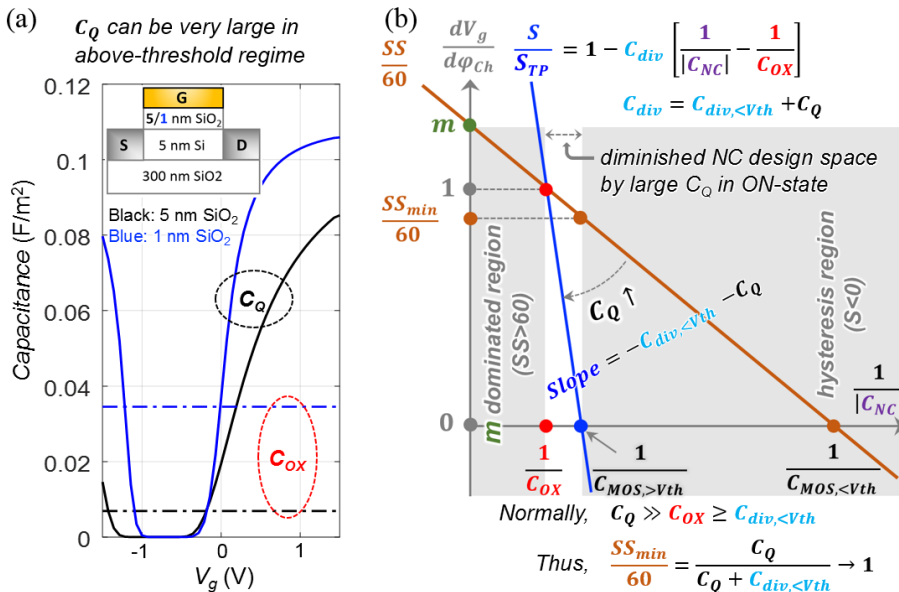


Fig. 5. (a) Simulated C_Q in an ultrathin Si SOI MOSFET. Even in such a thin film, C_Q is still much larger w.r.t. the 1 nm SiO₂ gate oxide capacitance C_{ox} . (b) Hysteresis should be eliminated not only in subthreshold regime as the design in Fig. 3(b), but also in above-threshold regime. The rapidly increasing C_Q with gate bias turns the S/S_{TP} curve clockwise, narrowing the NC design space. Eventually, the ultra-large C_Q in the above-threshold regime can diminish the NC design space, and constrain the obtainable minimum SS (SS_{min}) close to 60 mV/dec. Note $C_{div} = C_{div,<V_{th}} + C_Q$, which is essentially the slope of S/S_{TP} curve.

In FETs, quantum capacitance C_Q describes the response of the mobile charges to channel potential modulation. In contrast to $C_{div,<V_{th}}$ (and hence $C_{MOS,<V_{th}}$), as well as C_{OX} , C_{div} (and C_{MOS}) in near- and above-threshold regime are greatly contributed by mobile charge carriers, i.e., C_Q . Even in the ultrathin channel of a UTB SOI MOSFETs, C_Q is still much larger than C_{OX} (**Fig. 5(a)**). It increases the slope of S/S_{TP} line, i.e., rotates the S/S_{TP} line clockwise, w.r.t. the $SS/60$ line, as illustrated in **Fig. 5(b)**, and significantly raises the lower bound of $|C_{NC}|$ (below which hysteresis appears), eventually diminishing the NC design space (in between $C_{OX}C_Q/(C_{OX}+C_Q)$ and C_{OX}). The minimum achievable SS (SS_{min}) is raised to $60 C_Q/(C_Q+C_{div,<V_{th}})$, which approaches 60, in normal MOSFETs.

E. Designing NC-FET in the Quantum Capacitance Limit

Based on above analysis, lowering C_Q , desirably into the quantum capacitance limit ($C_Q < C_{OX}$), seems an effective direction, in enlarging NC design space and reaching small SS_{min} . To achieve low C_Q , low-DOS material systems could help. SS_{min} and NC design space are evaluated for Si, $Ga_{0.47}In_{0.53}As$, and 2D MoS_2 , in **Fig. 6(a)** and **(b)**, respectively, versus $C_{div,<V_{th}}$ and C_{OX} , which are normalized to equivalent oxide thickness (EOT) for the convenience

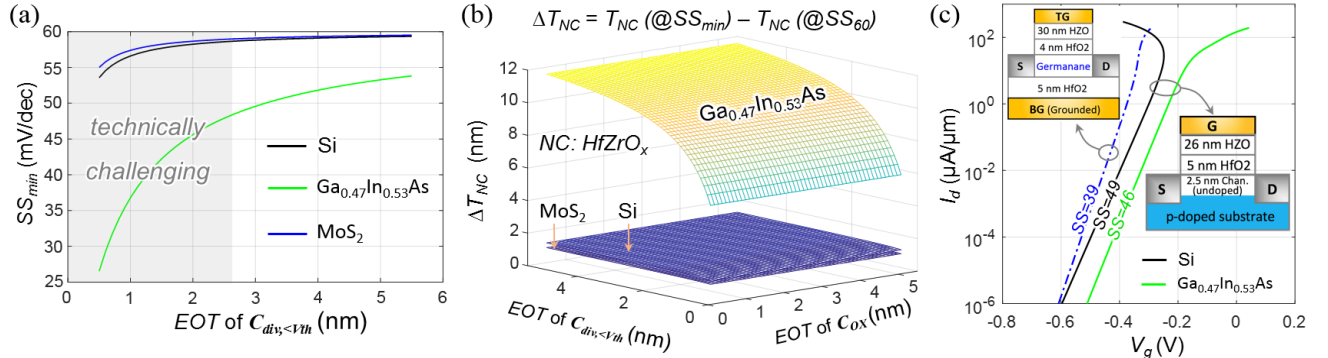


Fig. 6. Calculated (a) SS_{min} and (b) NC thickness design space (ΔT_{NC}) for Si, $Ga_{0.47}In_{0.53}As$, and MoS_2 . The low-DOS $Ga_{0.47}In_{0.53}As$ shows great advantages. $C_{div,<V_{th}}$ and C_{OX} are normalized to equivalent oxide thickness (EOT). (c) With the same device structure/size, $Ga_{0.47}In_{0.53}As$ device can achieve smaller SS , w.r.t. Si device, without hysteresis. SS of Germanane device can reach 39 mV/dec.

of comparison. For bulk materials, $C_{div,<V_{th}}$ can be realized in the form of C_{dep} , by engineering the channel doping level and profile. For 2D materials which lack effective and controllable doping techniques, a bottom gate can be introduced to serve as $C_{div,<V_{th}}$ ($=C_{BOX}$). As shown in **Fig. 6(a)(b)**, the low-DOS $Ga_{0.47}In_{0.53}As$ does provide much smaller SS_{min} , and larger NC (HfZrOx is used in the calculation) design space (difference in NC thickness at SS_{min} and SS of 60), w.r.t. Si and MoS_2 . Further reduction of the DOS of GaInAs system by increasing In content is feasible, but will result in lowered bandgap that degrades ON-OFF current ratio. The emerging 2D MoS_2 , although promising for low-power MOSFETs due to its thinness [5], has relatively large electron/hole effective masses, which makes it a large-DOS system for FETs. In contrast, Germanane (a single-layer 2D semiconductor) possesses small effective mass and decent bandgap [6], thus can benefit NC-FET design. **Fig. 6(c)** shows simulated I_d - V_g curves of Si, $Ga_{0.47}In_{0.53}As$, and Germanane NC-FETs. With exactly the same structure/size (inset), hysteresis appears in the Si NC-FET but absent in the $Ga_{0.47}In_{0.53}As$ device, because of the low-DOS benefit. Optimized Germanane NC-FET can achieve hysteresis-free 39 mV/dec SS .

F. The Role of NC Non-Linearity

Constant NC dielectric constant $|e_{NC}|$ or $|C_{NC}|$, i.e., linear P - E relation, is valid only within limited range (**Fig. 1(b)**), it increases with Q_{MOS} or gate bias, as indicated by the derived formula in **Fig. 7(a)**. This non-linearity introduces a damping term to the slopes of both $SS/60$ and S/S_{TP} lines versus NC layer thickness T_{NC} (**Fig. 7(a)**), which can be depicted as a counterclockwise rotation of both S/S_{TP} and $SS/60$ lines, leading to enlarged NC design space, but increased SS , as illustrated in **Fig. 7(b)**. **Fig. 7(c)** and **(d)** show simulated I_d - V_g and S - I_d characteristics of a Si SOI NC-FET (inset), respectively, with different non-linearity term β . With increased β , the hysteresis is effectively eliminated, at the expense of increased SS , which is consistent with the uncovered role of NC non-linearity in **Fig. 7(b)**. A balance between sub-60 SS and NC stability can be achieved in principle by engineering this non-linearity.

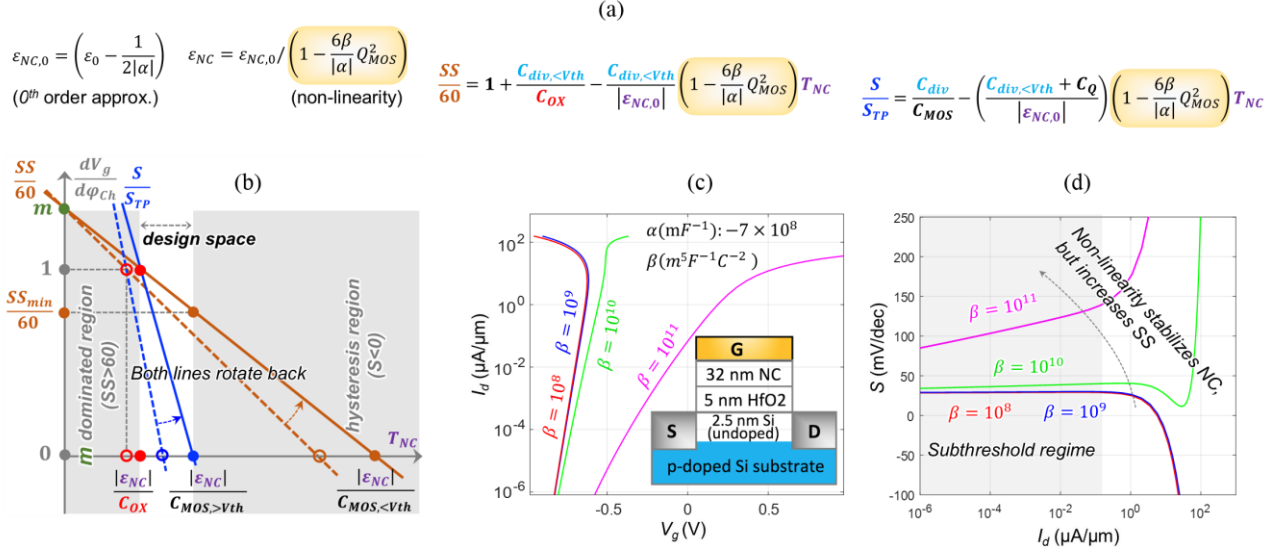


Fig. 7. (a) The non-linearity of NC dynamically increases $|\varepsilon_{NC}|$ (or $|C_{NC}|$) with Q_{MOS} , or gate bias. (b) It rotates back both S/S_{TP} and $SS/60$ lines, which enlarges the NC design space constrained by C_Q , but increases SS . (c),(d) Verification of the uncovered non-linearity physics by varying the strength of NC non-linearity, β , in simulation.

G. IMG: Borrow Parasitic Charge for Polarization in NC

An internal metal gate (IMG) inserted between the NC layer and oxide have been found able to achieve small SS in short-channel FinFETs, without introducing hysteresis [7]. This section clarifies the underlying physics using the same framework developed above. **Fig. 8(a)** shows the capacitor network in a NC-FET with IMG. It can be found that two additional fringing (overlapping included) capacitors, $C_{frin,s/d-IMG}$, appear between source/drain and the floating IMG. S formula is revisited for this structure, as shown in **Fig. 8(b)**. For those “good” FETs, such as FinFETs, $C_{div,<v_{th}}$ is negligible, and S and SS formula can be reduced to very simple forms (**Fig. 8(b)**), and are plotted in **Fig. 8(c)**. Interestingly, the NC design space and SS_{min} become irrelevant w.r.t. C_Q , and only dependent on C_{OX} and $C_{frin,s/d-IMG}$. This is because $C_{frin,s/d-IMG}$ provide parasitic charge in both subthreshold and above-threshold regime to induce polarization in NC, which unlocks the dependence of polarization on mobile charge (or C_Q) in “good” FETs. As indicated by the SS_{min} formula inside **Fig. 8(c)**, SS_{min} can be effectively reduced by increasing the ratio of $C_{frin,s/d-IMG}$ to C_{OX} , which perfectly explains the previous


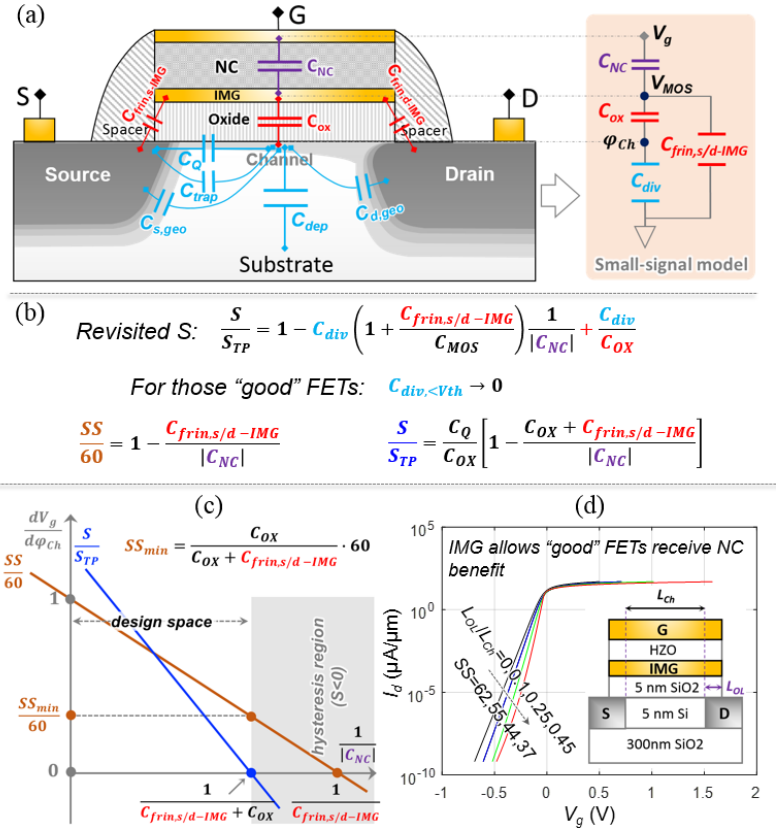


Fig. 8. (a) Capacitors in a NC-FET with internal metal gate (IMG). (b) Revisited S and SS formula. (c) IMG can borrow charge from fringing/overlap capacitance in subthreshold regime, thereby unlocking polarization from C_Q , and enlarging the NC design space for small SS_{min} . (d) Simulation results based on a Si SOI MOSFET verify the uncovered the IMG mechanism. The larger the L_{ot}/L_{ch} , more the NC benefits.

report [7] that short-channel NC FinFETs with IMG can achieve small SS . For long-channel NC-FETs, large overlap between source/drain and IMG, w.r.t. channel length, can be designed to reduce SS , which is confirmed by simulation of a Si SOI NC-FET, as shown in **Fig. 8(d)**. However, it is worth noting that introducing IMG into NC-FET gate stack may induce floating gate memory effect.

H. A More Practical Role of NC for FETs - Voltage Loss Recycler

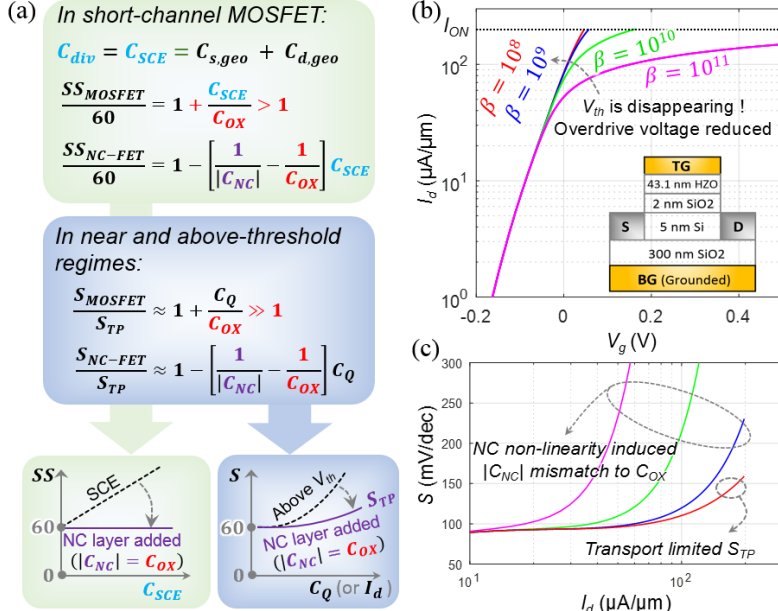

Quantum capacitance (i.e., inversion charge screening effect) and short-channel effect (SCE) can be absorbed by a simple $|C_{NC}| = C_{OX}$ matching

Fig. 9. (a) With a simple $|C_{NC}|=C_{OX}$ matching, SS can be restored to 60 mV/dec in short-channel MOSFETs, and S above threshold can be reduced to the transport limit (S_{TP}). Thereby, subthreshold voltage loss and overdrive voltage loss are recycled. (b)(c) Verification of the idea with simulation.

no matter how large C_{SCE} or C_Q is, as illustrated in the schematic in **Fig. 9(a)**. In other words, S can be restored to 60 in subthreshold, and to transport mechanism limited S_{TP} in the above-threshold regimes. The significance of the latter is that it provides an alternative solution to reduce the supply voltage and hence switching energy, i.e., by saving overdrive voltage, which also occupies a big portion of the entire supply voltage, instead of struggling to save subthreshold voltage. This idea is supported by the simulation results in **Fig. 9(b)** and (c). Note that small NC non-linearity is desired to reduce S in above-threshold regime. Finally, it is instructive to note that polarization rate in NC [8] should be improved to GHz range, for high-performance and low-power logic application.

III. SUMMARY

A summary of this work, as well as relevant suggestions to NC-FET experimentalists, are provided as follows:

- 1) NC does not help state-of-the-art MOSFET platforms (such as SOI, FinFET, NWFET, CNT-FET, 2D-FET...) achieve sub-60 mV/dec SS , unless internal metal gate (IMG) and overlap capacitance (between source/drain and IMG) are introduced. However, IMG may result in floating gate memory effect and lowered thermal budget issue.
- 2) Appropriate voltage divider capacitor (generally minimized in conventional MOSFET design) should be intentionally introduced to exploit NC benefit in the subthreshold regime.
- 3) Smaller-density-of-states (DOS) materials provide larger NC design space as well as smaller SS_{min} . Maximum benefit can be derived from NC FETs working in the quantum capacitance limit.
- 4) The non-linearity of NC helps reduce hysteresis, but leads to increased SS . A balance between small SS and hysteresis-free I-V can be reached in principle by engineering this non-linearity.

- 5) The varying quantum capacitance makes $|C_{NC}|$ -to- C_{MOS} matching very difficult. From a more practical point of view, it is encouraging to simply match $|C_{NC}|$ to the constant gate oxide capacitance, which can effectively recycle the subthreshold voltage loss of short-channel MOSFETs, and reduce the overdrive voltage (charge screening effect forces overdrive voltage to drop primarily across the gate oxide, which is essentially a loss).

REFERENCES

- [1] J. C. Tolédano, and P. Tolédano, *The Landau Theory of Phase Transitions*. Singapore: World Scientific, 1987.
- [2] S. Salahuddin, and S. Datta, "Use of negative capacitance to provide voltage amplification for low power nanoscale devices," *Nano Lett.*, vol. 8, no. 2, pp. 405–410, Feb. 2008.
- [3] Z. Krivokapic, et al., "14 nm ferroelectric FinFET technology with steep subthreshold slope for ultra low power applications," *IEEE Int. Elec. Dev. Meeting*, pp. 357–360, 2017.
- [4] M. Si, et al., "Steep-slope hysteresis-free negative capacitance MoS₂ transistors," *Nature Nano.*, vol. 13, pp. 24–28, Jan. 2018.
- [5] W. Cao, et al., "2D semiconductor FETs- Projections and design for sub-10 nm VLSI," *IEEE Trans. Electron Devices*, vol. 62, no. 11, pp. 3459–3469, Nov. 2015.
- [6] R. Ghosh, et al., "Germanane: A low effective mass and high bandgap 2-D channel material for future FETs," *IEEE Trans. Electron Devices*, vol. 61, no. 7, pp. 2309–2315, July 2014.
- [7] H. Ota, et al., "Fully coupled 3-D device simulation of negative capacitance FinFETs for sub 10 nm integration," *IEEE Int. Elec. Dev. Meeting*, pp. 318–321, 2016.
- [8] M. Kobayashi, et al., "Experimental study on polarization-limited operation speed of negative capacitance FET with ferroelectric HfO₂," *IEEE Int. Elec. Dev. Meeting*, pp. 314–327, 2016.