

Master equation for operational amplifiers: stability of negative differential converters, crossover frequency and pass-bandwidth

T. M. Mishonov, V. I. Danchev, E. G. Petkov*
*Faculty of Physics, St. Clement of Ohrid University at Sofia,
5 James Bourchier Blvd., BG-1164 Sofia, Bulgaria*

V. N. Gourev
*Department of Atomic Physics, Faculty of Physics,
St. Clement of Ohrid University at Sofia,
5 James Bourchier Blvd., BG-1164 Sofia, Bulgaria*

I. M. Dimitrova
*Faculty of Chemical Technologies,
University of Chemical Technology and Metallurgy,
8 Kliment Ohridski Blvd., BG-1756 Sofia*

N. S. Serafimov
*Faculty of Telecommunications, Technical University Sofia,
8 Kliment Ohridski Blvd., BG-1000 Sofia, Bulgaria*

A. A. Stefanov
*Faculty of Mathematics, St. Clement of Ohrid University at Sofia,
5 James Bourchier Blvd., BG-1164 Sofia, Bulgaria*

A. M. Varonov†
*Department of Theoretical Physics, Faculty of Physics,
St. Clement of Ohrid University at Sofia,
5 James Bourchier Blvd., BG-1164 Sofia, Bulgaria*

(Dated: 07 April 2019)

The time dependent master equation from the seminal article by Ragazzini, Randall and Russell [J. R. Ragazzini, R. H. Randall and F. A. Russell, “Analysis of Problems in Dynamics by Electronic Circuits”, Proc. of the I.R.E., **35**, pp. 444–452, (1947)] is recovered as necessary tool for the analysis of contemporary circuits with operational amplifiers. This equation gives the relation between time dependent the output voltage $U_0(t)$ and the difference between the input voltages ($U_+(t)$ and $U_-(t)$). The crossover frequency f_0 is represented the time constant τ_0 of this equation. The work of the master equation is illustrated by two typical examples: a) the stability criterion of the devices with negative impedance converters, which we consider as a new result b) the frequency dependence of the amplifiers with operational amplifiers given in the technical specifications without citations of time dependent equation. A simple circuit for determination of f_0 is suggested and the method is illustrated by determination of crossover frequency for the low-noise and high speed ADA4898 operational amplifier. It is concluded that for an exact calculation of the pass bandwidth of amplifiers with active filters the 70 years old master equation is a useful technique implicitly included in the contemporary software. The frequency dependent formulae for the amplification coefficient of inverting and non-inverting amplifiers are given for the case of non-zero conductivity between the inputs of the operational amplifiers.

I. INTRODUCTION

Inspired by Heaviside operational calculus 70 years ago, Ragazzini, Randall and Russell [1] introduced the idea and coined the generic term operational amplifier [2] (enabling summation, integration and differentiation), and introduced

* E-mail: mishonov@bgphysics.eu

† E-mail: avaronov@phys.uni-sofia.bg

the master equation

$$U_+ - U_- = G^{-1}U_0, \quad \hat{G}^{-1} = \frac{1}{G_0} + \tau_0 \hat{s}, \quad (1)$$

which describes the relation between input voltages $U_+(t)$ and $U_-(t)$ and output voltage $U_0(t)$. Here \hat{s} is the time differentiating operator

$$\hat{s} = \frac{d}{dt}, \quad (2)$$

which for exponential time dependence of the voltages $U \propto e^{st}$ is reduced to its eigenvalue $\hat{s}e^{st} = se^{st}$, and for the reciprocal open loop-gain we have

$$G^{-1}(\omega) = G_0^{-1} + s\tau_0, \quad s = j\omega, \quad (3)$$

where $j^2 = -1$ and ω is the frequency. As static open-loop gain $G_0 \gg 1$ for all high frequency applications, the G_0^{-1} term is negligible. The time constant of the operational amplifier is represented by the crossover frequency f_0

$$\tau_0 = \frac{1}{2\pi f_0}, \quad (4)$$

called also -3dB frequency of the open-loop gain. Implicitly the equation from the work of Ragazzini, Randall and Russell [1] exists in Fourier representation in the modeling of operational amplifiers since 1970 [3–8] but never as a differential equation describing time dependent voltages

$$U_+(t) - U_-(t) = \left(\frac{1}{G_0} + \tau \frac{d}{dt} \right) U_0(t) \quad (5)$$

which is necessary for the transient analysis given by the commercial software. The Fourier representation of this time dependent equation Eq. (3) can be found however in many sources. Here we wish to emphasize that fundamental equations of physics and engineering are given in time representation; let us recall Maxwell, Schrödinger and Newton equations.

Nevertheless, the master equation of the operational amplifier is in some sense new as it is almost impossible to find a description how the procedure for determination of f_0 can be derived and how it is possible to calculate the frequency dependence of the amplification of non-inverting amplifier, for example, given in the many technical applications, see for example the specification for operational amplifier ADA4817 [9]. The name of the equation itself is not even finalized cf. [10] and in many applications the frequency dependence is neglected leaving no trace of any time or frequency relation. Another important example is the stability problem of circuits with operational amplifiers.

Instead of review, here we will present only two typical examples illustrating the applicability of the master equation Eq. (1) to the negative impedance converter (NIC) and 2) the determination of crossover frequency f_0 by frequency dependence of the amplification of a non-inverting amplifier analyzed in the next two sections.

II. NEGATIVE IMPEDANCE CONVERTER WITH OPERATIONAL AMPLIFIER

Negative impedance converters (NIC) are an important idea in electronics [11–13] and they can be easily constructed by operational amplifiers.

A circuit for NIC is depicted in Fig. 1; the figure is taken from Ref. [14]. Solving the corresponding Ohm equations

$$U - U_- = G^{-1}U_0, \quad I = \frac{U - U_0}{R_3} = \frac{U_0}{R_1 + R_2} = \frac{U_-}{R_1}, \quad (6)$$

together with Eq. (3) after some high-school algebra we obtain the impedance of the circuit

$$Z \equiv \frac{U}{I} = \frac{R_3}{1 - \frac{R_1}{R_1 + R_2} + G_0^{-1} + \tau_0 s}. \quad (7)$$

Let us recall the derivation: 1) from the last equation we express $U_- = U_0 R_1 / (R_1 + R_2)$; this is actually a voltage divider; 2) then we substitute so expressed U_- in the first equation and obtain $U_0 = U / [R_1 / (R_1 + R_2) + G^{-1}]$;

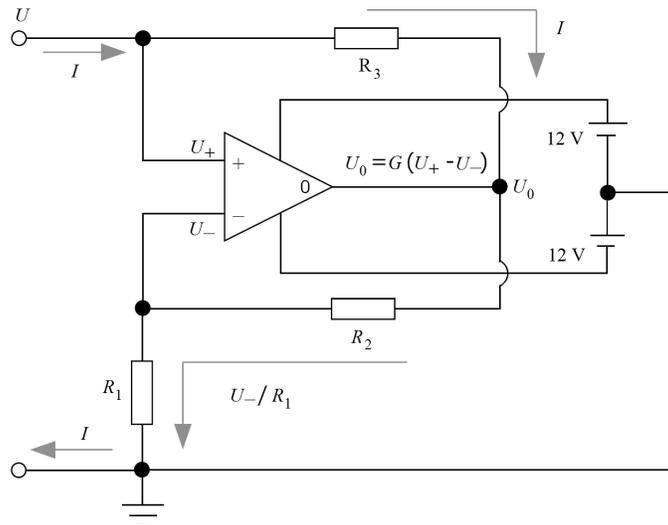


FIG. 1. Negative impedance converter built by operational amplifier according NASA patent [15]. For static voltages and negligible reciprocal open-loop gain $G_0^{-1} \ll 1$ the circuit gives for the ratio of input voltage and current $U/I = -R_1 R_3 / R_2$.

3) finally we substitute U_0 in the first formula for the current I and arrive at Eq. (7). In the static case $s = 0$ and negligible $G_0^{-1} \ll 1$ this equation gives

$$Z(\omega = 0) \approx -\bar{R}, \quad \bar{R} \equiv \frac{R_1 R_3}{R_2}. \quad (8)$$

This result can be checked by current-voltage characteristics of the NIC.

If an external load resistor R_e is connected in parallel to the NIC the total conductivity is zero

$$\frac{1}{Z} + \frac{1}{R_e} = 0 \quad (9)$$

and this eigenvalue problem has an explicit solution

$$\tau_0 s + G_0^{-1} = \frac{1}{1 + \frac{R_3}{R_e}} - \frac{1}{1 + \frac{R_2}{R_1}}, \quad (10)$$

for the real in this case exponent s . For negligible $G_0^{-1} \ll 1$ s is positive if $R_3/R_e < R_2/R_1$ or

$$R_e > \bar{R} \equiv R_1 R_3 / R_2. \quad (11)$$

Positive and real value of s means exponential increase e^{st} of the voltage up to appearance of nonlinear effects, for example lightning of a light emitting diode (LED). A voltmeter will show significant voltage and such an impedance cannot be measured by a digital Ohmmeter. Such circuit, however, can be used for generation of voltage oscillations in parallel resonance circuit with big resistance in the resonance shown in Fig. 2. For high quality factor $Q = \sqrt{L/C}/R \gg 1$ resonance contours the effective resistance $R_{\text{eff}} = Q^2 R > \bar{R}$ and in the circuit down in Fig. 2 electric oscillations are excited. When an instability parameter $(R_{\text{eff}} - \bar{R})/\bar{R} \ll 1$ is relatively small, the amplitude of the voltage oscillations is slightly above the forward voltage U_c (the critical voltage to light the LED) of the LED and one can evaluate the consumed by the diode power as $P = U_c^2 / 2\bar{R}$.

However, if we change the polarity of the operational amplifier as it is illustrated in Fig. 3, it leads formally to change of the sign in the stability equation Eq. (10). For such circuits NIC creates electric oscillations in sequential resonance circuits with small resistance of the coil $R \ll \sqrt{L/C}$. For high resistance loads, however, the inverted circuit from Fig. 3 is stable. If we connect a voltmeter it will show zero voltage and some digital Ohmmeters can show negative resistance $-\bar{R}$ as it is demonstrated in Fig. 4

Analyzing the work of NIC, we suppose that the exponent s is real. We consider that similar stability analysis [16] for frequency dependent negative resistors (FDNR) [17–19] can be useful for many applications.

In the next section we will consider the work of the master equation of operational amplifiers applied for the purely imaginary $s = j\omega$.

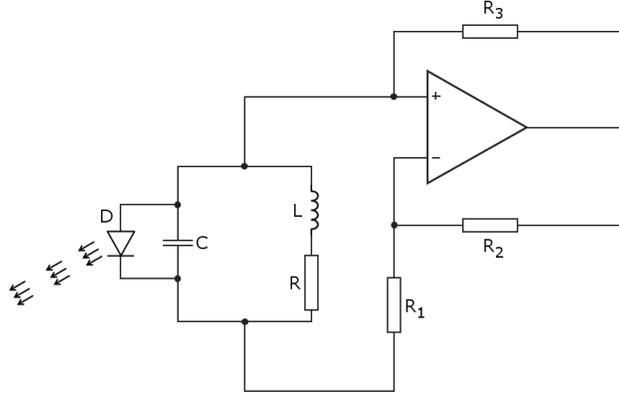


FIG. 2. Can a NIC excite electric oscillations in a parallel resonance circuit? Light emitting diode (LED) D radiates a pulsating light and limits the amplitude of the electric oscillations.

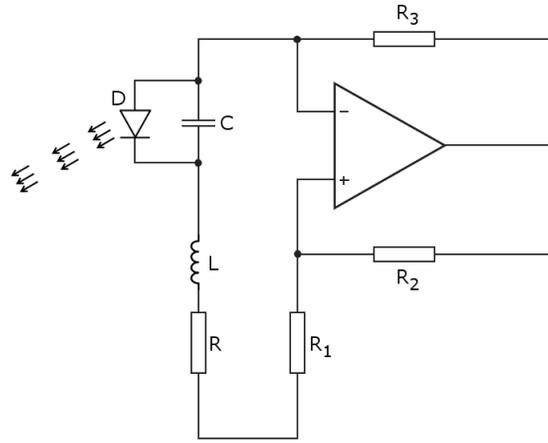


FIG. 3. Excitations of electric oscillations by NIC in a sequential resonance circuit. Why is the polarity of the operational amplifier opposite with the polarity of the parallel resonance circuit? Can polarities be calculated using the theoretical description of the work of operational amplifiers? Search through the Internet.

III. FREQUENCY DEPENDENT AMPLIFICATION FOR A NON-INVERTING AMPLIFIER

For the non-inverting amplifier, depicted in Fig. 5, the input voltage U_i is applied directly to the (+) input of the operational amplifier $U_+ = U_i$. The master equation of operational amplifiers Eq. (1) $U_+ - U_- = G^{-1}(\omega)U_0$ gives an expression for the current through the finite input impedance z_a

$$I_a = -\frac{U_+ - U_-}{z_a} = -\frac{G^{-1}U_0}{z_a}. \quad (12)$$

Tracing the voltage drop from U_+ through z_a and $r \equiv z_g$ to ground gives an expression for

$$I_n = -\frac{U_+}{z_g} - I_a z_a = -\frac{U_+}{z_g} + \frac{G^{-1}U_0}{z_g}, \quad (13)$$

where we have used the last expression for I_a . Using the last two equations, the current

$$I_f = I_n - I_a = -\frac{U_+}{z_g} + G^{-1}U_0 \left(\frac{1}{z_g} + \frac{1}{z_a} \right). \quad (14)$$

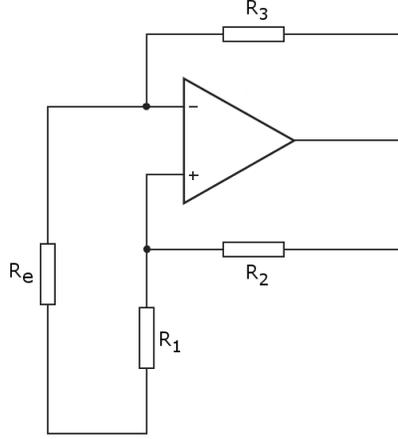


FIG. 4. Whether a digital Ohmmeter with big internal resistance R_e can show negative Ohms $-\bar{R}$, where the parameter $\bar{R} \equiv R_1 R_3 / R_2$.

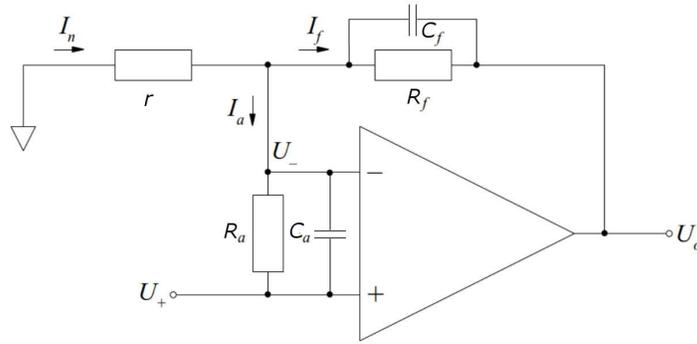


FIG. 5. Non-inverting amplifier with a finite input resistance R_a (non-zero input conductivity) of the operational amplifier.

Finally, tracing the voltage drop between U_0 through Z_f and r to ground, we obtain

$$U_0 = -I_n z_g - I_f Z_f. \quad (15)$$

Substituting here Eq. (13) for I_n and Eq. (14) for I_f , rearranging the terms and making convenient substitutions, we arrive at the frequency dependent amplification

$$\Upsilon_{\text{NIA}}(\omega) \equiv \frac{U_0}{U_+} = \frac{1}{Y^{-1}(\omega) + G^{-1}(\omega)[1 + \epsilon_a(\omega)]}, \quad (16)$$

$$Y(\omega) = \frac{Z_f(\omega)}{z_g(\omega)} + 1, \quad z_g = r, \quad \frac{1}{Z_f} = \frac{1}{R_f} + j\omega C_f,$$

$$\epsilon_a(\omega) = Y^{-1} r \sigma_a, \quad \sigma_a \equiv \frac{1}{z_a} \equiv \frac{1}{R_a} + j\omega C_a. \quad (17)$$

If the influence of the small feedback capacitor C_f parallelly connected to the feedback resistor is negligible, i.e. for $\omega R_f C_f \ll 1$ and $G_0^{-1} \ll 1$, we obtain the well-known formulae Eq. (4) and Eq. (5) of Ref. [9], see also Refs. [20–23]

$$\Upsilon_{\text{NIA}}(\omega) = \frac{2\pi f_{\text{crossover}}(R_f + r)}{(R_f + r)s + 2\pi f_{\text{crossover}} r}, \quad (18)$$

$$\Upsilon_{\text{NIA}}(0) = Y_0 \equiv \frac{R_f}{r} + 1, \quad \text{for } f = \frac{\omega}{2\pi} \ll f_{\text{crossover}},$$

where the notation is once again not unique

$$f_{\text{crossover}} \equiv f_0 \equiv f_{-3 \text{ dB open loop}}, \quad (19)$$

and here we follow the notations from the technical specifications of operational amplifiers, for example ADA4817 [9]. The Eq. (4) of Ref. [9] coincides with Eq. (16) of the present paper and this agreement can be considered as implicit proof of Eq. (3) and the time dependent master equation Eq. (5). For measurement of $f_{\text{crossover}}$ we have to perform linear regression for $|\Upsilon_{\text{NIA}}|^{-2}(\omega^2)$ using the experimentally determined ratio of input to output voltages

$$\frac{|U_i|^2}{|U_0|^2} = \frac{1}{(1 + R_f/r)^2} + \frac{f^2}{f_{\text{crossover}}^2}, \quad f = \frac{\omega}{2\pi}. \quad (20)$$

Here the first term is negligible if the reciprocal amplification coefficient $1/(1 + R_f/r)$ is smaller than accuracy of measurement, say 1%. The slope of the $|U_i|^2/|U_0|^2$ versus f^2 plane determines the crossover frequency and this method is invariant with respect of the used resistors.

The calculation of the pass-bandwidth requires the square of the modulus of the complex amplification, which after a straight forward calculation from Eq. (16)

$$\begin{aligned} & |\Upsilon_{\text{NIA}}(\omega)|^2 \\ &= \frac{\mathcal{N}^2(\omega)}{[G_0^{-1}\mathcal{N} + (Y_0^{-1} + \omega^2\tau_s^2)]^2 + (\omega\tau_s)^2 \left[\frac{\tau}{\tau_s}\mathcal{N} + I_0 \right]^2}, \end{aligned} \quad (21)$$

where

$$\mathcal{N}(\omega) = 1 + \omega^2\tau_s^2, \quad I_0 \equiv 1 - Y_0^{-1}, \quad \tau_s \equiv \frac{C_f R_f}{Y_0}. \quad (22)$$

The derivation of the frequency dependent amplification for the rest of the most widely used amplification circuits (differential B 1 and inverting amplifier B 2) is analogous and can be found in the appendix.

IV. DETERMINATION OF THE CROSSOVER FREQUENCY f_0 OF THE OPERATIONAL AMPLIFIERS

Let us refer to the formula for frequency dependent amplification $\Upsilon_{\text{NIA}}(\omega)$ Eq. (18), the ratio of the output U_0 and input voltages U_I of a non-inverting amplifier with gain resistance r and big feedback resistor R taken from the specification of ADA4817 [9] and the well known monograph [20]

$$\Upsilon_{\text{NIA}}(\omega) = \frac{U_0}{U_I} = \frac{1}{Y_0^{-1} + G^{-1}(\omega)} = \frac{1}{\left(\frac{r}{R+r}\right) + s\tau_0}, \quad (23)$$

where

$$Y_0 = \frac{R}{r} + 1 \quad (24)$$

is the static (low frequency) amplification and in order to alleviate the notations, the index for feedback f is omitted, i.e. $R_f \equiv R$. Actually only the comparison of the two different expressions for $\Upsilon_{\text{NIA}}(\omega)$ allows to recover the original master equation Eq. (1)

When $s = j\omega$ is purely imaginary for the modulus of the amplification we have $Y(\omega) \equiv \sqrt{|\Upsilon_{\text{NIA}}(\omega)|^2}$ and from Eq. (1) we obtain

$$\frac{1}{Y^2(f)} = \frac{|U_I|^2}{|U_0|^2} = \frac{1}{Y_0^2} + \frac{f^2}{f_0^2}, \quad f = \frac{\omega}{2\pi}. \quad (25)$$

Let us define $f_{-3\text{dB}}$ as frequency at which the power of amplification decreases two times

$$Y^2(f_{-3\text{dB}}) = \frac{1}{2}Y_0^2. \quad (26)$$

From Eq. (25) we easily obtain [9]

$$f_0 = Y_0 f_{-3\text{dB}}, \quad (27)$$

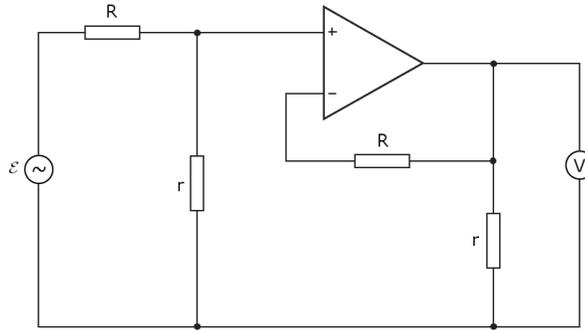


FIG. 6. A simple circuit for determination of the crossover frequency of an operational amplifier. The voltage divider creates a DC (or low frequency) voltage $\mathcal{E}r/(R+r)$, which is later restored by a non-inverting amplifier with DC amplification $Y_0 = (R+r)/r$. We change the frequency, so that at some frequency $f_{-3\text{dB}}$ the amplification becomes two times smaller than the DC one $|Y(f_{-3\text{dB}})|^2 = Y_0^2/2$ and determine crossover frequency as $f_0 = Y_0 f_{-3\text{dB}}$.

where we have obviously considered -3 dB closed-loop gain in this expression. A simple circuit for determination of f_0 using this formula is represented in Fig. 6. The voltage from the AC voltage source \mathcal{E} is divided by a voltage divider Y_0 times and later on at small frequencies is completely recovered by the static amplification Y_0 . In this way using a dozen ADA4898-2 we obtained for the crossover frequency $f_0 = (46.6 \pm 1.3)$ MHz for 1 V_{p-p} and $f_0 = (59.9 \pm 6\%)$ for 100 mV_{p-p} which is in acceptable agreement with the values pointed out in the specification [24]. The uncertainty is related with the used oscilloscope Hitachi V-252, more precise measurements with Anfatec USB Lockin 250 kHz amplifier[25] revealed that perhaps the parameter f_0 is temperature dependent and this requires additional research.

V. DISCUSSION AND CONCLUSIONS

According to the best we know, results for stability of circuits of negative impedance converters Eq. (10) and Eq. (11) are new results. We analyze what the criterion for agitation of oscillations in parallel and sequential resonance circuits is. Our research complete the well-known patent [15].

Using the master equation of operational amplifiers, we re-derive the frequency dependent formulae for amplification of inverting and non-inverting amplifiers given in the technical specifications [9] without any reference to contemporary books or papers.

We give a prescription for determination of the crossover frequency Eq. (27) and we consider this not redundant since operational amplifiers vendors provide this parameter in their specifications, often with 50% difference. The exact knowledge of the crossover frequency f_0 is necessary when we need to precisely determine the non-ideal effects of operational amplifiers. Even historically[1] in order to create electrical analogs of dynamic systems and to fit the differential equations which govern their dynamics, it had been necessary to know the master equation which describes the work of the differential amplifier.

For instance, in cases when there is a need of an exact calculation of the pass bandwidth of amplifiers with active filters, the master equation Eq. (1) is an adequate approach. We analyzed two typical examples of the application of this equation (B2 with finite internal impedance) and close the discussion of the formula for frequency dependent amplification coefficient from the seminal work Eq. (3) of Ref. [1] where a circuit with the topology of inverting amplifiers (IA) has been used, switched with opposite polarity of the operational amplifier

$$\Upsilon_{\text{IA}}(s) = - \{z_i(s)/Z_f(s) + [1 + z_i(s)/Z_f(s)] G(s)\}^{-1}, \quad (28)$$

where z_i is the gain (input $z_i \equiv z_g$) impedance and Z_f is the feedback impedance switched to the operational amplifier with gain given by the master equation $G^{-1} \approx s\tau_0$ and with infinite internal impedance. Compare this formula with the formula for NI amplification Eq. (7) of Ref. [9]. As a rule classical papers are never cited in specifications and contemporary books in electronics. But sometimes the use of classical achievements are very useful.

Let summarize the results derived in the present paper: 1) we introduce time dependent master equation for operational amplifiers Eq. (5), 2) we derive a simple method for determination of crossover frequency of operational amplifiers as a linear regression of the experimental data processing Eq. (25), 3) or the simpler version Eq. (27). 4)

We apply our method for measurement of the cross-over frequency for a contemporary low-noise operational amplifier ADA4898-2 and reliably observe small difference from the data given in the specification of the manufacturer [24]. We suggest a working method for determination of the cross-over frequency f_0 and systematize the corrected formulas for the main type amplifiers, see Appendix A. 5) Applying time dependent equation Eq. (5), we derive stability criterion for oscillators with NIC, and obtain when NIC can excite oscillations in parallel and sequential resonance circuits. 6) As the master equation of operational amplifiers is a low frequency approximation we expect that it is good working for significant amplifications, say for gain > 5 .

Even if similar calculations are frequently found in the main textbooks about operational amplifiers, the proposed examples (NIC and non-inverting amplifier, as well as the examples in the appendix) can be useful for circuit designers and students approaching the design and the analysis of circuits based on modern operational amplifiers.

ACKNOWLEDGMENT

The author appreciate the cooperation with Vassil Yordanov in early stages [14, 26] of the present research, for the friendship and stimulating comments.

-
- [1] J. R. Ragazzini, R. H. Randall and F. A. Russell, "Analysis of Problems in Dynamics by Electronic Circuits", Proc. of the I.R.E., **35**, no. 5, pp. 444–452, Eqs. (3,6,7,32), May 1947, <https://doi.org/10.1109/JRPROC.1947.232616>.
 - [2] "Op Amp History" in W. G. Jung, *Op Amp Applications Handbook*, Newnes/Elsevier, 2005, ISBN-0-7506-7844-5; *Op Amp Applications*, Analog Devices, 2002, ISBN-0-916550-26-5.
 - [3] R. L. Geiger and A. Budak, IEEE Trans. Circ. and Sys., **cas-28**, No. 8, (1981); A. Budak, *Passive and active network analysis and synthesis*, (Houghton Mifflin, 1974).
 - [4] G. W. Roberts and A. S. Sedra, *Spice*, 2nd ed., (Oxford University Press, New York, 1997), Eq. (2.1).
 - [5] T. Deliyannis, Y. Sun, J. K. Fiddler, *Continuous-Time Active Filter Design*, (CRC-Press, New York, 1999), Eq. (3.47).
 - [6] M. S. Ghauri and K. R. Laker, *Modern Filter Design: Active Rc And Switched Capacitor*, (Institution of Engineering and Technology, 2003), Eq. (2.24).
 - [7] P. V. A. Mohan, *VLSI Analog Filters*, (Springer, New York, 2013), Eq.(2.1).
 - [8] M. H. Rashid, *Microelectronic circuits: Analysis and Design*, 2nd ed., (Cengage Learning, Stamford USA, 2011), Eqs. (2.48) and (2.71); 3rd ed., (Cengage Learning, Boston USA, 2017), chap. 2.
 - [9] Analog Devices, *Technical Specification ADA4817: Low Noise, 1 GHz FastFET Op Amps*, Rev. D, Figs. 53, 54, Eqs. (4-9), http://www.analog.com/static/imported-files/data_sheets/ADA4817-1_4817-2.pdf.
 - [10] L. Solymar "The motivation and technique of writing scientific contributions", Proc. of the IEEE, **51**, issue 4, pp. 628–629, April 1963, "How to Have a Paper Accepted", items 1), 3) and 5), <http://ieeexplore.ieee.org/document/1444170/>, DOI: 10.1109/PROC.1963.2240.
 - [11] J. L. Merrill Jr., "Theory of the negative impedance converter", Bell System Tech. J., **30**, pp. 88–109, Jan. 1951.
 - [12] J.C. Linvill, "Transistor Negative-Impedance Converters", Proceedings of the IRE 41 (6): 725–729 (1953), doi:10.1109/JRPROC.1953.274251.
 - [13] A.B. Pippard, *The Physics of Vibration. The simple classical vibrator* (Cambridge University Press., 1978) Sec. 11, Fig. 11.14.
 - [14] S. G. Manolev, V. G. Yordanov, N. N. Tomchev, T. M. Mishonov, "Volt-Ampere characteristic of 'black box' with a negative resistance", arXiv:1602.08090 [physics.ed-ph], Feb. 2016, <https://arxiv.org/abs/1602.08090>.
 - [15] G. J. Deboo, "Gyrator type circuit", U.S. patent 3493901, Feb. 3, 1970, <https://ntrs.nasa.gov/archive/nasa/casi.ntrs.nasa.gov/19680000084.pdf>, <https://ntrs.nasa.gov/archive/nasa/casi.ntrs.nasa.gov/19710003042.pdf>.
 - [16] R. F. Hoskins, "Stability of negative-impedance convertors", Electronic Letters, **2**, Sep. 1966, DOI: 10.1049/el:19660287.
 - [17] "Analog Filters", Fig. 8-47(A) in H. Zumbahlen, *Linear Circuit Design Handbook*, Newnes/Elsevier, 2008, ISBN-978-0-7506-8703-4; *Basic Linear Design*, Analog Devices, 2007, ISBN-0-916550-28-1;
 - [18] Analog Devices, *AD711: Precision, Low Cost, High Speed, BiFET Op Amp Data Sheet*, Rev. E, Fig. 18, <http://www.analog.com/media/en/technical-documentation/data-sheets/AD711.pdf>.
 - [19] E. W. Greneich, J. F. Delansky, "Controlled Circuit Elements", Fig. 14.20, in W. K. Chen, *The Circuits and Filters Handbook*, Boca Raton, Florida, USA: CRC Press, Taylor & Francis Group, 2009, ISBN: 978-1-4200-5887-1.
 - [20] K. G. McConnell and W. F. Riley, "Tools of tensometry" in A. S. Kobayashi, *Handbook on experimental mechanics*, Seattle, Washington, USA: Prentice-Hall Inc., 1987, chap. 3, Fig. 3.6b, Eq. (3.12), DOI: 10.1111/j.1747-1567.1985.tb02042.x.
 - [21] "Op Amp Basics", Fig. 1-7, Eq. (1-46) in W. G. Jung, *Op Amp Applications Handbook*, Newnes/Elsevier, 2005, ISBN-0-7506-7844-5; *Op Amp Basics*, Analog Devices, 2002, ISBN-0-916550-26-5.
 - [22] D. G. Nairn, S. B. Franco "Operational Amplifiers", Eq. (16.27) in W. K. Chen, *The Circuits and Filters Handbook*, Boca Raton, Florida, USA: CRC Press, Taylor & Francis Group, 2009, ISBN: 978-1-4200-5887-1.
 - [23] M. Lee, T. Schibli, "Electronics for the Physical Sciences", Physics 3330 course, University of Colorado Boulder, (2012), http://www.colorado.edu/physics/phys3330/phys3330_sp12/phys3330_sp12/Home.html; "Experiment #4:

Operational Amplifiers and Negative Feedback,” Eq. (2), http://www.colorado.edu/physics/phys3330/phys3330_sp12/phys3330_sp12/Lab_Manual_files/Exp_4_Spring12.pdf.

- [24] Analog Devices, *Technical Specification ADA4898: High Voltage, Low Noise, Low Distortion, Unity-Gain Stable, High Speed Op Amp*, Rev. E, Table 1, Fig. 3, http://www.analog.com/static/imported-files/data_sheets/ADA4898-1_4898-2.pdf.
- [25] Anfattec Instruments AG, *USB LOCKIN 250 LOCKIN AMPLIFIER AMPLIFIER 10 mHz to 250 kHz*, http://www.anfattec.net/downloads/USBLockIn/USBLockIn250_Manual.pdf.
- [26] T. M. Mishonov, V. G. Yordanov, A. M. Varonov “Measurement of electron charge q_e and Boltzmann’s constant k_B by a cheap do-it-yourself undergraduate experiment”, arXiv:1703.05224 [physics.ed-ph], Mar. 2017, <https://arxiv.org/abs/1703.05224>.

Appendix A: Impedance derivation with operational amplifier output current

In this appendix we are giving a detailed calculation of the problem given in the 3rd Experimental Physics Olympiad for high-school students [14]. The negative impedance converter shown in Fig. 7 differs from the same shown in Fig. 1 only by the added output current I_0 from the operational amplifier. Applying Ohm’s law between U_0 and the common

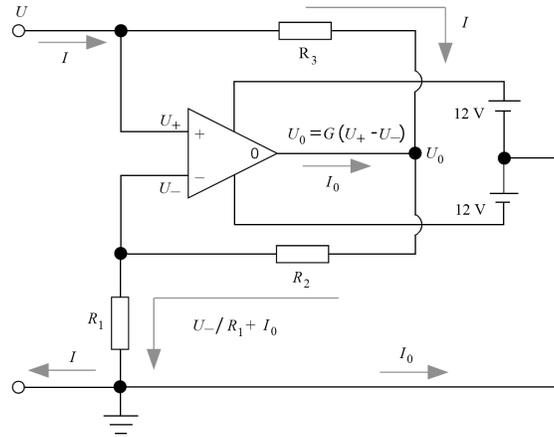


FIG. 7. Negative impedance converter with operational amplifier output current I_0 added. Besides this, the figure is analogous to Fig. 1. As a rule currents coming from the voltage supply to the operational amplifier ($1/2I_0$ in our case) are not shown in the circuits with operational amplifiers.

point, we have

$$U_0 = (I + I_0)(R_1 + R_2), \quad (\text{A1})$$

and analogously for

$$U_- = (I + I_0)R_1. \quad (\text{A2})$$

Dividing these equations, we obtain

$$U_- = U_0 \frac{R_1}{R_1 + R_2} \quad (\text{A3})$$

and substitute it in Eq.(1)

$$U = U_0 \left(G^{-1} + \frac{R_1}{R_1 + R_2} \right). \quad (\text{A4})$$

The Ohm’s law applied between U and U_0 gives

$$U - U_0 = IR_3, \quad (\text{A5})$$

from where $U_0 = U - IR_3$ and this expression is substituted in Eq. (A4) to obtain

$$U = (U - IR_3) \left(G^{-1} + \frac{R_1}{R_1 + R_2} \right). \quad (\text{A6})$$

Therefore for the impedance of the circuit $Z = U/I$ we have

$$1 - \frac{R_3}{Z} = \frac{1}{G^{-1} + \frac{R_1}{R_1 + R_2}}, \quad (\text{A7})$$

which after a little bit arrangement is

$$Z = \frac{R_3}{1 - \frac{1}{G^{-1} + \frac{R_1}{R_1 + R_2}}}, \quad (\text{A8})$$

confirming Eq. (7). We have to repeat, as a rule currents coming from the voltage supplies to operational amplifiers and current going to the common point are not given in the circuits drawing; we are making a small exception.

Appendix B: Frequency dependence of the amplification for the main types of amplifiers

1. Differential Amplifier

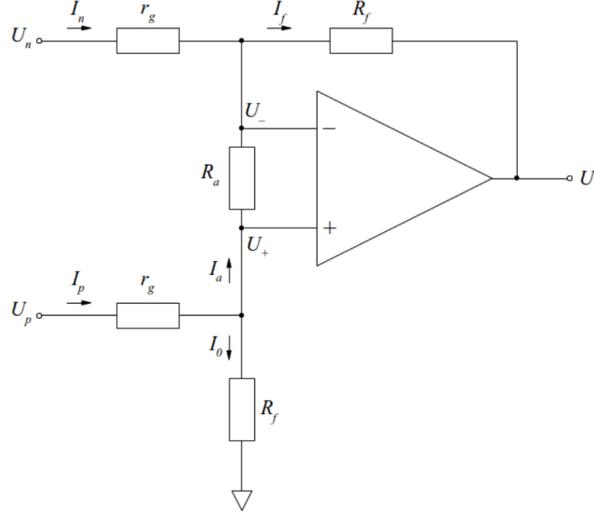


FIG. 8. Differential amplifier with a finite input resistance R_a (non-zero input conductivity) of the operational amplifier.

Let us trace, see Fig. 8, the voltage drop from the negative (n) input of the differential amplifier and the output (o) voltage U_0 . The input current is given by the Ohm law and the voltage at the (-) input of the operational amplifier is given by the proportion of the voltage divider

$$U_- = \left(I_n = \frac{U_n - U_0}{z + R_f} \right) R_f + U_0 = \frac{R_f}{z + R_f} U_n + \frac{z}{z + R_f} U_0. \quad (\text{B1})$$

Analogous voltage divider gives the voltage of (+) input of the operational amplifier expressed by the voltage drop between positive (p) input of the ground

$$U_+ = \left(I_n = \frac{U_p - 0}{z + R_f} \right) R_f + 0 = \frac{R_f}{z + R_f} U_n. \quad (\text{B2})$$

Then we calculate the voltage difference at the inputs of the operational amplifier

$$U_+ - U_- = \frac{\Delta U \equiv U_p - U_n}{z + R_f} R_f - \frac{z}{z + R_f} U_0 \quad (\text{B3})$$

which together with Eq. (1) gives

$$\begin{aligned}
\Upsilon_{\Delta}(\omega) &\equiv \frac{U_0}{U_p - U_n} \\
&= \frac{1}{\Lambda(\omega) + [\Lambda(\omega) + 2\epsilon_a(\omega)]G^{-1}(\omega) + G^{-1}(\omega)}, \\
\Lambda(\omega) &= \frac{z_g(\omega)}{Z_f(\omega)}, \quad z_g = r + \frac{1}{j\omega C_g}, \quad Z_f = R_f \\
\epsilon_a(\omega) &= z_g(\omega)\sigma_a(\omega), \quad \sigma_a(\omega) \equiv \frac{1}{R_a} + j\omega C_a,
\end{aligned} \tag{B4}$$

cf. Eq. (3.14) of Ref. [20]. Here we added the correction ϵ_a of internal conductivity σ_a between inputs of operational amplifier in differential mode. A detailed derivation will be given later in Appendix B.

An instrumentation amplifier can be considered as a buffer of two symmetric non-inverting amplifiers followed by a difference amplifier. The amplification of the instrumentation amplifier is just the product of the amplifications of the non-inverting and the difference amplifiers

$$\Upsilon_{\text{INS}}(\omega) = \Upsilon_{\text{NIA}}(\omega)\Upsilon_{\Delta}(\omega). \tag{B5}$$

2. Inverting Amplifier

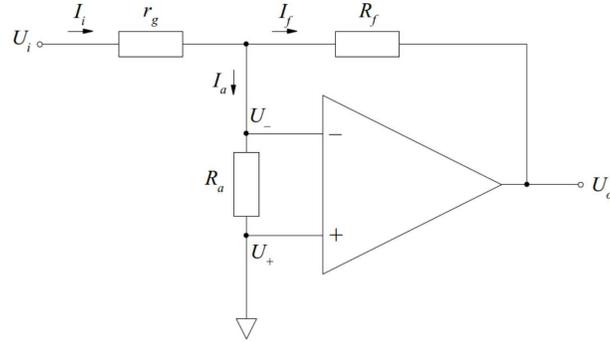


FIG. 9. Inverting amplifier with a finite common mode input resistance R_a (non-zero input conductivity) of the operational amplifier.

If for the differential amplifier, see Fig. 9, the positive (p) input is grounded $U_p = 0$, this leads to $U_+ = 0$ and $\Delta U = -U_n$ hence for the transmission function we get $\Upsilon_{\text{IA}}(\omega) = -\Upsilon_{\Delta}(\omega)$ or finally

$$\begin{aligned}
\Upsilon_{\text{IA}}(\omega) &\equiv \frac{U_0}{U_n} \\
&= -\frac{1}{\Lambda(\omega) + [\Lambda(\omega) + \epsilon_a(\omega)]G^{-1}(\omega) + G^{-1}(\omega)}, \\
\Lambda(\omega) &= \frac{z_g(\omega)}{Z_f(\omega)}, \quad z_g = r + \frac{1}{j\omega C_g}, \quad Z_f = R_f \\
\epsilon_a(\omega) &= z_g(\omega)\sigma_a(\omega), \quad \sigma_a(\omega) \equiv \frac{1}{R_a} + j\omega C_a.
\end{aligned} \tag{B6}$$

The subtle difference with Eq. (B4) is only the coefficient in front of ϵ_a , cf. Eq. (3.10) of Ref. [20]. For negligible the internal conductivity σ_a we derive

$$\Upsilon_{\text{IA}}(\omega) = -\frac{1}{\Lambda(\omega) + [1 + \Lambda(\omega)]G^{-1}(\omega)}, \tag{B7}$$

i.e. Eq. (28) which A large capacitance of the gain impedance stops the offset voltages coming from former amplification blocks. Additionally, for high enough working frequencies $\omega r C_g \gg 1$ and negligible static-inverse-open-loop gain $G_0^{-1} \ll 1$ we obtain the well-known formulae Eq. (7) and Eq. (8) of Ref. [9], see also Ref. [20]. Actually coincidence of Eq. (7) of Ref. [9] with Eq. (28) from our paper with reverse engineering gives a proof of our time dependent master equation Eq. (5). For frequencies much lower than the crossover frequency $f_{\text{crossover}}$ of the operational amplifier the amplification is in a wide band frequency independent

$$\Upsilon_{\text{IA}}(\omega) \approx -\frac{2\pi f_{\text{crossover}} R_f}{(R_f + r)s + 2\pi f_{\text{crossover}} r}, \quad (\text{B8})$$

$$\Upsilon_{\text{IA}} = -\frac{R_f}{r} \quad \text{for} \quad f = \frac{\omega}{2\pi} \ll f_{\text{crossover}}. \quad (\text{B9})$$

For calculation of the pass-bandwidth we will need to know the square of the modulus of the complex amplification

$$\begin{aligned} |\Upsilon_{\text{IA}}(\omega)|^2 &= |\Upsilon_{\Delta}(\omega)|^2 \\ &= \frac{(\omega\tau_g)^2}{[1 + G_0^{-1} - M\omega^2\tau\tau_g]^2 + (\omega\tau_g)^2 \left[\frac{\tau}{\tau_g} + \Lambda_0 + G_0^{-1}M \right]^2}, \\ \Lambda_0 &\equiv \frac{r}{R_f}, \quad M \equiv 1 + \Lambda_0, \quad \tau_g \equiv C_g R_f. \end{aligned} \quad (\text{B10})$$

For large enough amplification $r \ll R_f$ from Eq. (B7) we obtain

$$\begin{aligned} \frac{R_f}{r} &\gg 1, \quad \omega r C_g \gg 1, \quad \omega\tau \ll 1, \\ \Upsilon_{\text{IA}}(\omega) &\approx -\frac{R_f}{r + \frac{1}{j\omega C_g} + jL_{\text{eff}}\omega}, \\ L_{\text{eff}} &\equiv \tau R_f, \quad Q = \frac{\sqrt{L_{\text{eff}}/C_g}}{r} = \frac{\sqrt{\tau R_f/C_g}}{r} \ll 1, \end{aligned} \quad (\text{B11})$$

and in this approximation the frequency dependence of the amplification reminds of the frequency response of an overdamped oscillator with low quality factor Q .

Appendix C: Influence of finite common mode input conductivity of operational amplifiers

In this appendix we will investigate the influence of a small conductivity between the inputs of an operational amplifier in differential mode. For the simplicity of the notations we will write only the big differential mode input resistance R_a , while above we have included the differential mode input capacitance. In the next subsection we will start with the inverting amplifier.

1. Inverting amplifier

Standard scheme of the inverting amplifier is presented in Fig. 9. Let us write the Kirchhoff equations. The input current I_i is branching to the current I_f passing through the feedback resistor R_f and the current I_a flowing between (-) and (+) inputs of the operational amplifier

$$I_i = I_a + I_f. \quad (\text{C1})$$

Let's trace the voltage drop between the input voltage by gain resistor r_g and input resistor R_a to the ground

$$U_i = R_a I_a + r_g I_i. \quad (\text{C2})$$

The Ohm law of the internal resistor of the operational amplifier is

$$-R_a I_a = U_+ - U_- = G^{-1} U_o, \quad (\text{C3})$$

where the potential difference between inputs voltages is expressed by the output voltage U_o and reciprocal open loop gain G^{-1} . Finally starting from the output voltage U_o and passing through the feedback resistor R_f and gain resistor r_g we reach the input voltage U_i .

$$U_i = U_o + R_f I_f + r_g I_i. \quad (\text{C4})$$

From Eq. (C3) we express $I_a = -U_o/R_a G$ and substitute in Eq. (C2) which now reads

$$U_i = -G^{-1}U_o + r_g I_i, \quad (\text{C5})$$

and gives

$$I_i = (U_i + G^{-1}U_o) / r_g. \quad (\text{C6})$$

The substitution of I_i in Eq. (C1) gives

$$I_f = \frac{U_i}{r_g} + \left(\frac{1}{r_g} + \frac{1}{R_a} \right) \frac{U_o}{G}. \quad (\text{C7})$$

Substitution of derived in such a way currents in Eq. (C4) gives for the output voltage U_o the well-known result Eq. (3.10) of Ref. [20]

$$\frac{U_o}{U_i} = - \frac{R_f/r_g}{1 + G^{-1} \left(1 + \frac{R_f}{r_g} + \frac{R_f}{R_a} \right)}. \quad (\text{C8})$$

In the next subsection we will perform analogous consideration for the non-inverting amplifier.

2. Non-inverting amplifier

The non-inverting amplifier circuit is depicted in Fig. 5. The current from the ground I_n is branching to the current I_f passing through the feedback resistor R_f and the current I_a flowing through the operational amplifier (-) and (+) inputs. The charge conservation in the branching point is

$$I_n = I_f + I_a. \quad (\text{C9})$$

Tracing the voltage drop from ground through the gain resistor r_g and the operational amplifier internal resistance R_a to the input voltage U_i we have

$$U_+ = -r_g I_n - R_a I_a. \quad (\text{C10})$$

Where we take into account that the input voltage is directly applied to the positive input of the operational amplifier where $U_i \equiv U_+$. The Ohm law of the internal resistor of the operational amplifier is

$$-R_a I_a = U_+ - U_- = G^{-1}U_o, \quad (\text{C11})$$

where the potential difference between the input voltage is expressed by the output voltage U_o and reciprocal open loop gain G^{-1} . The last circuit to consider is the voltage drop from the output voltage U_o through R_f and r_g to ground

$$U_o = -I_f R_f - I_n r_g. \quad (\text{C12})$$

Expressing the currents I_f from Eq. (C9), I_n from Eq. (C10), I_a from Eq. (C11) and substituting them in Eq. (C12), for the ratio of the output voltage U_o to the input voltage U_i we obtain

$$\frac{U_o}{U_i} = \frac{R_f/r_g + 1}{1 + G^{-1} \left(1 + \frac{R_f}{r_g} + \frac{R_f}{R_a} \right)}. \quad (\text{C13})$$

The differential amplifier analyzed in the next subsection is slightly more complicated.

3. Differential amplifier

The differential amplifier circuit is shown in Fig. 8. The feedback current I_f going through the feedback resistor R_f is a sum of the input current I_n from the input voltage U_n and the current I_a flowing through the operational amplifier (+) and (-) inputs

$$I_f = I_n + I_a. \quad (\text{C14})$$

The other input current I_p from the input voltage U_p flowing through the gain resistor r_g is branching to the current I_a and the current I_0 flowing through the other feedback resistor R_f to ground

$$I_p = I_0 + I_a. \quad (\text{C15})$$

Now let trace the circuit between U_n and the output voltage U_o passing through r_g and the feedback resistor R_f

$$U_n - U_o = r_g I_n + R_f I_f. \quad (\text{C16})$$

Another circuit to consider is from U_p through r_g and R_f to ground, for which the Kirchhoff's voltage law reads

$$U_p = r_g I_p + R_f I_0. \quad (\text{C17})$$

Substituting I_f from Eq. (C14) into Eq. (C16), for I_n we derive

$$I_n = \frac{U_n - U_o}{r_g + R_f} - \frac{R_f}{r_g + R_f} I_a. \quad (\text{C18})$$

Expressing I_0 from Eq. (C15) and substituting it into Eq. (C17), for I_p we obtain

$$I_p = \frac{U_p}{r_g + R_f} + \frac{R_f}{r_g + R_f} I_a. \quad (\text{C19})$$

The difference between positive U_+ and negative U_- input of the operational amplifier can be expressed simultaneously by the output voltage U_o and the Ohm law for the internal resistance of the operational amplifier

$$R_a I_a = U_+ - U_- = G^{-1} U_o. \quad (\text{C20})$$

The current $I_a = U_o / G R_a$ is easily expressed by the open loop gain G , output voltage U_o and internal resistance of the operational amplifier in differential mode R_a . Finally we write down the Kirchhoff's voltage law for the circuit from U_p to U_n through the resistors with values r_g , R_a and r_g

$$U_p - U_n \equiv \Delta U = r_g I_p + R_a I_a - r_g I_n, \quad (\text{C21})$$

where $\Delta U = U_p - U_n$ denotes the input voltage difference between positive U_p and negative U_n input voltages. Substitution of the already derived expressions for the input currents I_p , I_n and the internal operational amplifier current I_a into Eq. (C21) yields for the transmission coefficient, i.e. ratio of the output voltage U_o and input voltage difference ΔU ,

$$\frac{U_o}{\Delta U} = \frac{R_f / r_g}{1 + G^{-1} \left(1 + \frac{R_f}{r_g} + 2 \frac{R_f}{R_a} \right)}. \quad (\text{C22})$$

For high frequencies we have to take into account also the input capacitance of the operational amplifier in differential mode $R_a \rightarrow Z_a = R_a / (1 + j\omega R_a C_a)$. For the used ADA4898[24] $R_a = 5 \text{ k}\Omega$ and $C_a = 2.5 \text{ pF}$. In all formulae we consider frequency dependent open-loop gain $G^{-1}(\omega) = G_0^{-1} + j\omega\tau$ given by the master equation of the operational amplifiers Eq. (1).